
INSTRUCTION MANUAL

UPRIGHT SHOWCASE

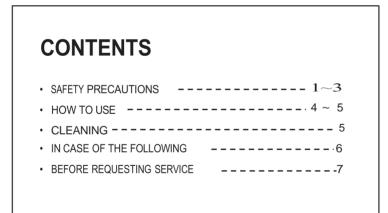

Please read these instructions completely before operating the units.

SAFETY PRECAUTIONS

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the'z!::.WARNING" heading. However, the cases listed under the'zl::.CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

WARNING Improper handling of the unit could lead to death or serious injury.

CAUTION Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark 9:,ntains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this
 product can easily find it.

PRECAUTIONS FOR INSTALLATION




Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.


PRECAUTIONS FOR USE

WARNING All repairs, disassembly and modifications Never splash water directly onto the should be performed only by qualified product or wash with water as shorttechnicians. Attempting to perform circuit and electrical leakage could result. **FLECTRICAL** D0N1TAMPER these yourself could result in a fire, SHOCK HAZARDS malfunction, and injury. Never put flammable or volatile Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. substances into the unit as explosion and fire could result. Also, placing heavy objects the power PROHIBITED cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire. Use a dedicated wall outlet. Do not use Never use flammable spray cans or leave extension cords or convenience flammable substances near the unit. receptacles as this could result in Sparks from electrical switches could PROHIBITED electrical shock, overheating and a fire. result in explosion and fire.

SAFETY PRECAUTIONS

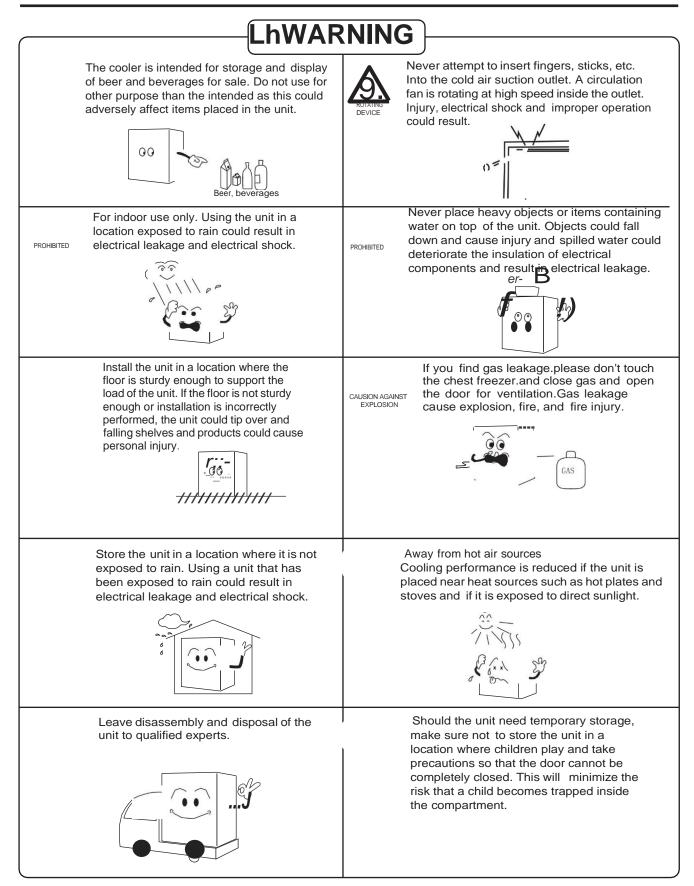

SAFETY PRECAUTIONS

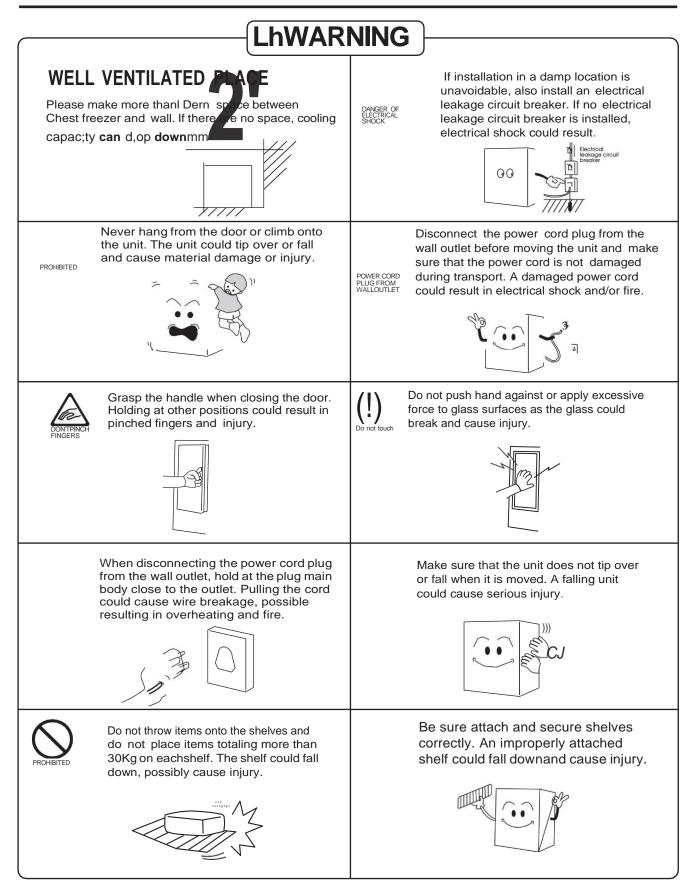

HOW TO USE

BEFORE USE

eRemove shipping package, tape, etc, and leave doors open ventilation for a while.

- The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Please insert power supply plug into the wall outlet ,singte-phale to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

• Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

TEMPERATURE ADJUSTMENT

• Thermostat was adjusted using temperature at factory. To adjust it, turn right could cause temperature in showcase down. To raise the temperature, turn it left. Excessive refrigeration will increase electricity consumption unnecessarily.

DRAIN TRAY

- · Defrosting is performed automatically and drain water is collected in the drain tray.
- Water is in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

HOW TO USE

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- · Place items so that they do not protrude from the shelves. The gap between the shelves and the
- door is used for circulation of cold air.
- Place items evenly on all shelves.
 Please do not display goods on the bottom. Please put goods on the shelf.

THERMOSTAT INSTRUCTION

Operation

Control Panel

The control panel is located below the doors on the front of the appliance.

Turn On

- 1. Turn the Power switch On.
- I. Set the temperature to the desired setting (see below).
- 2. Close the door of the appliance.
- 3. Connect the appliance to a mains power supply.

CD Note: The Cooling Light is illuminated when the appliance is chilling the interior cabinet.

4. Turn light switch On [I] or Off [OJ as required.

Set the Operating Temperature

- I. Press the **B** button. The display will flash.
- 2. Press the or buttons to display the required temperature.
- 3. Press the **O** button to store the temperature.


Manual Defrost

Cooler feature an automatic defrost. However, should the appliance require an additional defrost period press and hold the button for 6 seconds.

Automatic defrost cycles are every 6 hours and last 20 minutes (factory defaults).

To stop the Defrost press and hold the button for 6 seconds.

CD Note: If a manual defrost is started this resets the automatic defrost timer. During defrost periods the Defrost light is illuminated.

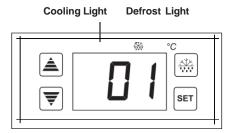

WARNING: Do not splash water directly onto the cooler and do not wash with water.] Short - circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.



2 CHECKS

WARNING

To ensure the safety, perform the following checks after cleaning.

els the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.

eCheck the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

IN CASE OF THE FOLLOWING

POWER FAILURE

Keep opening and closing of the door to a minimum. Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet. Clean the compartment interior and wipe away all water. To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet. When moving the cooler, make sure that the feet do not damage the power cord. Do not let the feet hit against floor steps, thresholds, etc.

4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door. Make sure not to store the unused cooler at a location where children play. Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

INSTRUCTION MANUAL BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

BEFORE REQUESTING SERVICE

No refrigeration at all	 Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the shop's power fuses blown and/or the circuit breaker activated?
Inadequate refrigeration	 Is the temperature setting appropriate? Are items obstructing the cold air inlet and suction outlet? Are stored items packed too tight? Is the door open or is it opened and closed frequently? Is the condenser clogged?
Excessive noise	 Are all feet in firm contact with the floor? Is the rear panel of the cooler contacting the wall or other objects? Are other objects in contact with the cooler?
Condensation on cooler exterior	Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal.wipe away condensation with a dry cloth.

Showcase sometimes stop running when thermostat turns off.

INSTRUCTION MANUAL

REQUIRED INFORMATION

 Nature of malfunction (as accurately as possible) 		Customer's name, address, phone number
² Product number (inscribed on badge)	5	Year and date of purchase
3 Serial number	6	Desired date for service visit



The object of the declaration described above is in conformity with the relevant Union harmonisation legislation EMC Directive 2014/30/EU Low Voltage Directive (LVD) 2014/30/EU. Ecodesign Directive 2009/125-EC (EU)2019/2016 (EU)2019/2018 (EU)2019/2024, (EU)2015-1095+(EU)2016/2282, 2015/1094 + (EU)2017/254

The following harmonised standards have been applied:

EN 60335-1:2012+A11

EN 60335-2-89:2010

AfP5 GS 2014:01 PAR. 3.1

Date of Issue:

13.05.2024

EN62233:2008

Signed for and on behalf of:

Name, Function, and Signature:

Pat-Naughton, Sales Director

erbay Itd

C€ The CE Markings affixed to all products complies with all EC Directives.

Company Seal

LS.SCD228LP/H-SM(NZL.NFE)